

The keyboard can be removed as follows:

1. Detach the spring at the yellow arrow
2. Loosen screws 1 and 2. Remove screws 3 and 4.
3. The keyboard can now be moved upward hinging at A en B.
4. When lifted far enough, the keyboard can be taken off the machine.

Note:

Underneath the keyboard, between 1 and 3 there is a kind of fork which needs to be properly positioned when the keyboard is put back. Ofcourse the spring must be put back as well.

